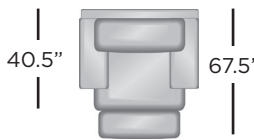 

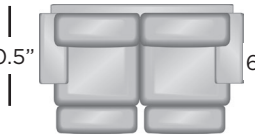 
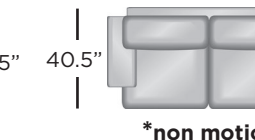 
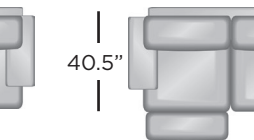 
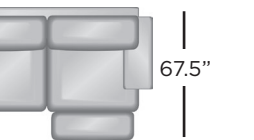 



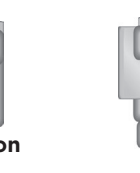 








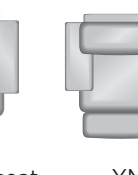 


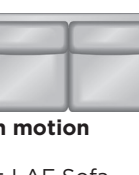 

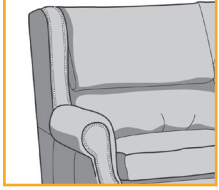 
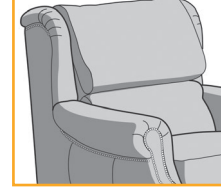 
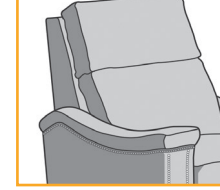 
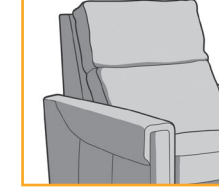 
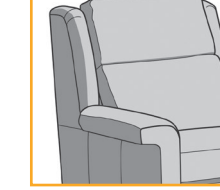 
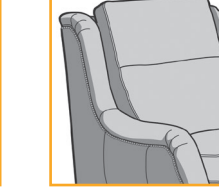 
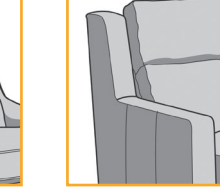 
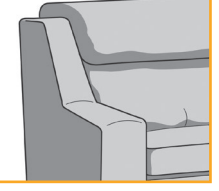 
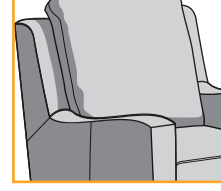 
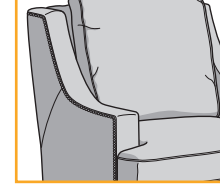 


1 Choose your frame Dimensions will vary based on arm selection. Dimensions are based on the Epic Arm and are approximate. *Choose "NM" in Step 5 for Non Motion.

 YM36 = Recliner 36" <input type="checkbox"/>	 YM36 = Chair 36" <input type="checkbox"/>	 YM64 = Loveseat 67" <input type="checkbox"/>	 YM64 = Loveseat 67" <input type="checkbox"/>	 YM90 = Sofa 93" <input type="checkbox"/>	 YM90 = Sofa 93" <input type="checkbox"/>					
M116 sofa comes in two pieces.		 YM116 = 4 Seat Sofa 116" <input type="checkbox"/>	 YM10 = Armless 26" <input type="checkbox"/>	 YM15 = Armless 26" <input type="checkbox"/>	 YM11 = LAF Chair 33.5" <input type="checkbox"/>	 YM12 = RAF Chair 33.5" <input type="checkbox"/>	 YM21 = LAF Loveseat 56" <input type="checkbox"/>	 YM21 = LAF Loveseat 56" <input type="checkbox"/>	 YM14NM = Armless Corner 40" <input type="checkbox"/>	 YM13NM = Quarter Round 48" <input type="checkbox"/>
 YM22 = RAF Loveseat 56" <input type="checkbox"/>	 YM22 = RAF Loveseat 56" <input type="checkbox"/>	 YM31 = LAF Sofa 80" <input type="checkbox"/>	 YM31 = LAF Sofa 80" <input type="checkbox"/>	 YM32 = RAF Sofa 80" <input type="checkbox"/>	 YM32 = RAF Sofa 80" <input type="checkbox"/>	 YM41NM = LAF Chaise 32" <input type="checkbox"/>	 YM42NM = RAF Chaise 32" <input type="checkbox"/>			

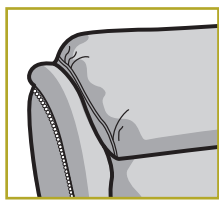 
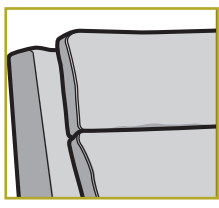 
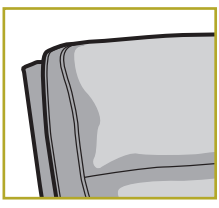 
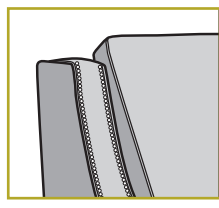 
Note: You cannot put a motion piece next to the M14 Armless Corner. You can only put a motion piece on one side of the M13 Quarter Round.

2 Choose your arm

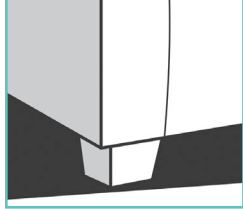 
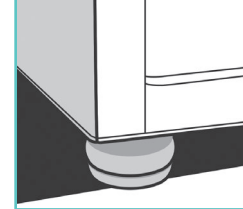 
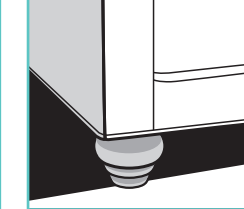 



 EA (Epic Arm) 7.5" arm width *A nail standard <input type="checkbox"/>	 WA (Westwood Arm) 7.5" arm width *A/AA nail standard <input type="checkbox"/>	 NA (Nordic Arm) 6.75" arm width .75" less per arm *A nail standard <input type="checkbox"/>	 MA (Manning Arm) 6.25" arm width 1.25" less per arm *No nails <input type="checkbox"/>	 GA (Ghent Arm) 7.5" arm width *No nails <input type="checkbox"/>	 SA (Sundance Arm) 5" arm width 2.5" less per arm *A/AA nail standard <input type="checkbox"/>	 TA (Track Arm) 5.5" arm width 2" less per arm *No nails <input type="checkbox"/>
 WT (Wide Track Arm) 9" arm width add 1.5" per arm *No nails <input type="checkbox"/>	 AA (Ansel Arm) 6.5" arm width 1" less per arm *No nails <input type="checkbox"/>	 MO (Moselle Arm) 3.25" arm width 4.25" less per arm *A nail standard <input type="checkbox"/>				

3 Choose your back

*Need approximately 3" from wall for reclining position.

 BB = Bustle Back <input type="checkbox"/>	 SB = Split Back <input type="checkbox"/>	 OP = One Piece Back <input type="checkbox"/>	 PB = Plain Back <input type="checkbox"/>
---	--	--	--

4 Choose your base *Small Block foot cannot be used on Nordic Arm. *Wide Block foot is only available with the Wide Track Arm.

 T = Tapered Leg <input type="checkbox"/>	 B = Bun foot <input type="checkbox"/>	 R = Round foot <input type="checkbox"/>	 *S = Small Block foot <input type="checkbox"/>	 *W = Wide Block foot <input type="checkbox"/>	 Power Switch
--	---	---	---	---	---

- Front two buttons adjust foot rest
- Back two buttons adjust head rest
- Center button is Home
- Four button remote standard on armless pieces
- On a PRB, USB port will reduce the length of time the battery will hold a charge

5 Choose your power or stationary

PR Power Recliner <input type="checkbox"/>	PRB Power Recliner with Battery <input type="checkbox"/>	NM Non Motion <input type="checkbox"/>
--	--	--

ALL STYLES IN THIS PROGRAM:
 1. In addition to the regular reclining power, each style has a power articulating headrest and is only available with power.
 2. Each style has a 4 button power switch with a home button with USB charger located on the inside of the arm.

All lines below must be completed. One sheet per item with the exception of sectionals.

Step 1 - Choose your frame (YM36 = chair)	YM36	<input type="checkbox"/>
Step 2 - Choose your arm (EA)	EA	<input type="checkbox"/>
Step 3 - Choose your back (BB = Bustle Back)	BB	<input type="checkbox"/>
Step 4 - Choose your base (T = Tapered Leg)	T	<input type="checkbox"/>
Step 5 - Choose your power (PR = Power Recliner)	PR	<input type="checkbox"/>

Ex. Style Number = **YM36 EA BB T PR**

Store _____
 Contact _____
 Email _____
 Date _____ Purchase Order # _____
 Style # _____
 Cover _____
 *Finish _____ *Nails _____
 *Cushion Fill _____ Quantity _____